


## 取り付け要領

BYTUM SLATE 3500



BYTUM BASE 2500 | BYTUM SLATE 3500

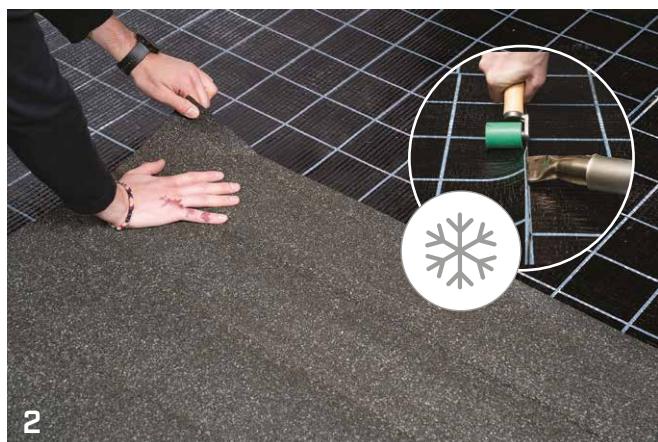

## 取り付け要領

### 入隅



3 MARLIN, CUTTER

4 ROLLER

### 外隅

