

# BEAR

## TORQUE WRENCH

- Precise torque control, which is essential when screwing full thread screws into a metal plate, for example; wide adjustment range



### CODES AND DIMENSIONS

| CODE  | dimensions<br>[mm] [in]                  | weight<br>[g] [lbs] | tightening<br>torque<br>[Nm] [ft-lbs] | pcs |
|-------|------------------------------------------|---------------------|---------------------------------------|-----|
| BEAR  | 395 x 60 x 60<br>15 9/16 x 2 3/8 x 2 3/8 | 1075<br>2.4         | 10 - 50<br>7 - 37                     | 1   |
| BEAR2 | 535 x 60 x 60<br>21 1/16 x 2 3/8 x 2 3/8 | 1457<br>3.2         | 40 - 200<br>29 - 147                  | 1   |

With 1/2" square drive.



# TORSMART

## DIGITAL ADAPTER FOR TIGHTENING TORQUE CONTROL

- Digital torque meter for accurate tightening torque control
- TORSMART is simply inserted between the tool (drill or wrench) and the socket
- It precisely measures the tightening torque, stores the data, and transmits it to the dedicated app for analysis. An acoustic signal indicates when the preset torque limit has been reached



### CODES AND DIMENSIONS

| CODE       | torque range<br>[Nm] [ft-lbs] | pcs |
|------------|-------------------------------|-----|
| TORSMART80 | 8 - 80<br>6 - 60              | 1   |

|                                |               |
|--------------------------------|---------------|
| Torque range                   | 8 - 80 Nm     |
| Connection                     | 3/8" (9,5 mm) |
| Dimensions (diameter x length) | 42 x 75 mm    |
| Weight                         | 160 g         |

Power supply: rechargeable battery, supplied with USB cable - charger not included.  
To operate, TORSMART must be connected via Bluetooth® through the Hydrajaws Verify application.



APP DOWNLOAD
Download the Hydrajaws Verify App to use TORSMART